



# Introduction to Mimio: Hardware

Please sign in by using the pen to click on your name

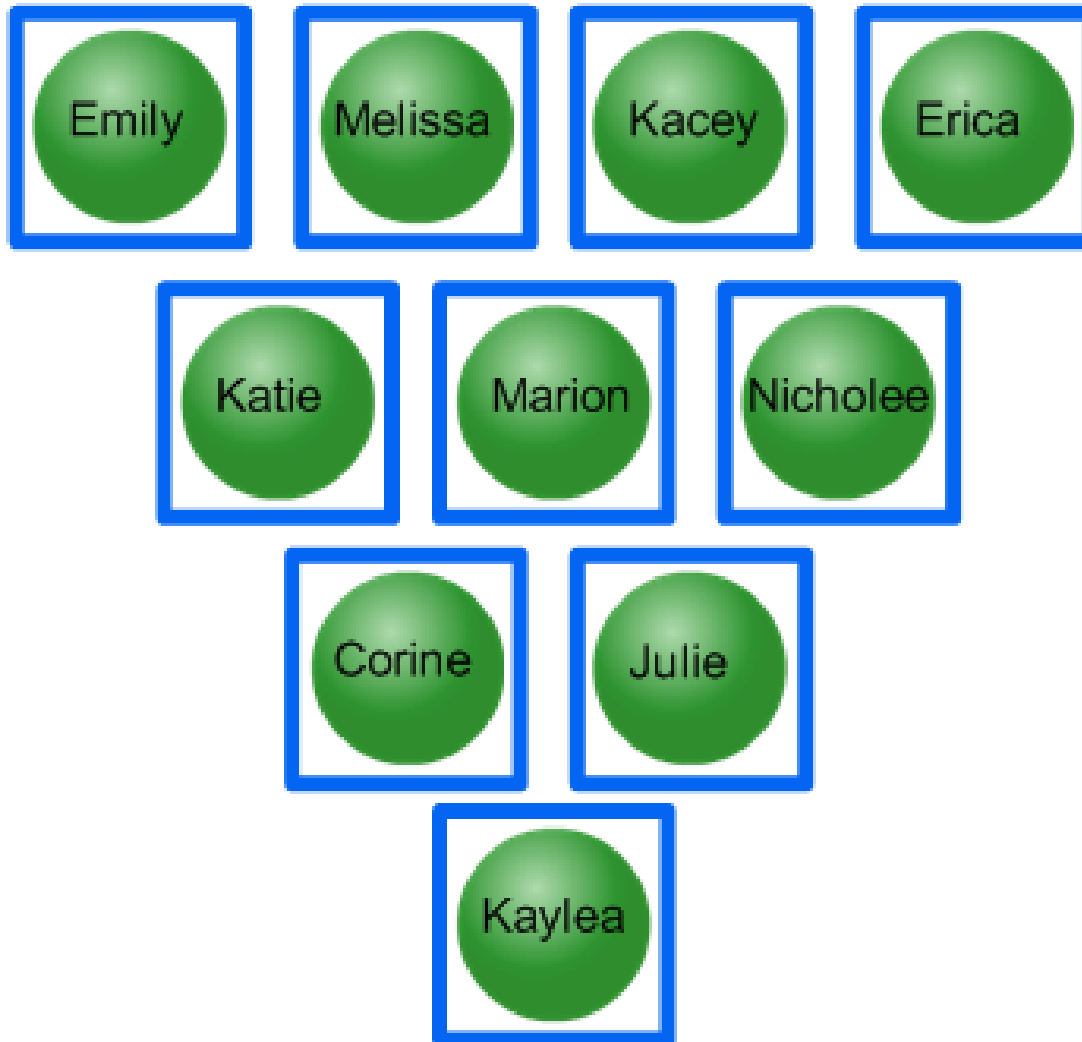

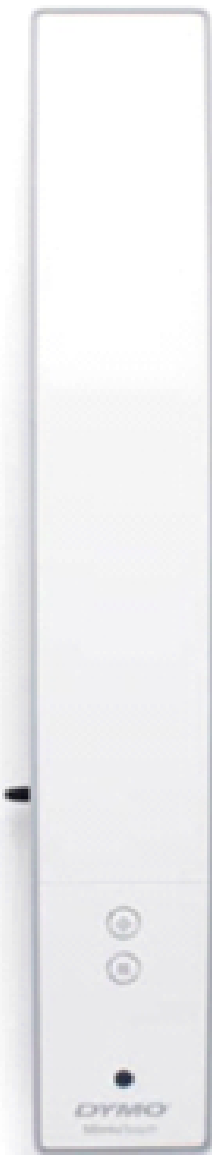

Bar  
aka "Mimio"



Stylus  
aka "Pen"



Hub  
aka "USB  
Thingie"



Power cord  
and plug


# Hardware

## **Set up**

1. Plug hub into USB port
2. Place Mimio bar on the left side of the board
3. Plug in the power cords
4. Wait for light on Mimio bar to turn green
5. Calibrate

## **Hardware**

The MimioTeach™ interactive system easily turns any dry erase whiteboard into an interactive system.

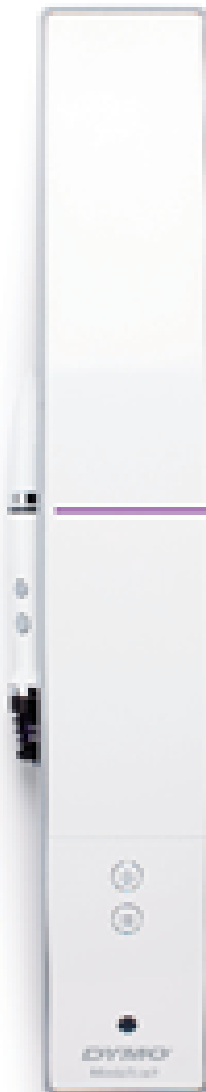

Dock the stylus on the side of the MimioTeach bar for recharging when not in use. Status light will turn solid green during charging.\*

\*An average of 20 days of use that it must be recharged immediately.


**Status Light**

**Off:** Not receiving power; USB/power cable is not connected or MimioTeach is turned off.

**Solid Green:** MimioTeach is connected and receiving power; MimioStudio™ software is running.

**Flashing Green:** MimioTeach is connected and receiving power; MimioStudio software is not running.


**Solid Amber:** MimioTeach is connected and receiving power; MimioTeach is searching for connection to the MimioHub™ receiver.

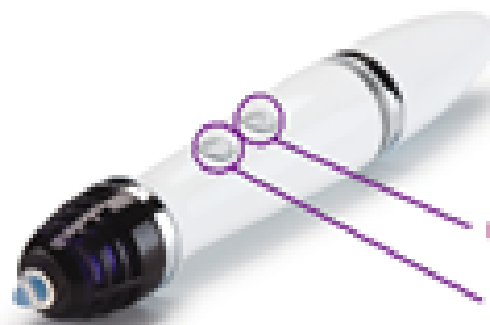

Button B = Tools

Button A = Hover

Depressing tip, while holding down the Button A, creates Right Click.

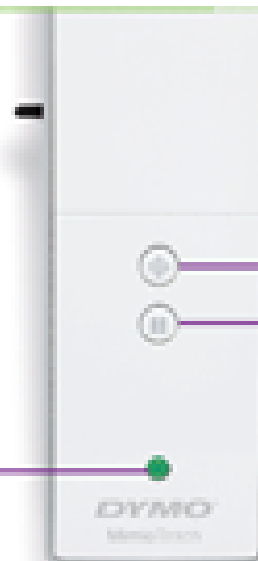

Interactive/Calibrate

Launch

*Instructor note: Use this page to demonstrate how the pen reacts if calibration is off and the differences when button A or button B is pressed*

**Hardware**

**Let's take a 5 minute  
break, and then it's  
your turn!**

**Hardware**